



KOAMTAC Fundamentals

How to Allocate KDC External 4MB Memory
(Available only for F/W version 3.0x)

KOAMTAC Fundamentals

How to Allocate KDC External 4MB Memory

In order to allocate the KDC external 4MB memory, you must first access the system configuration by accessing the menu.

To access the menu options for KDC100/200/300, press the UP & DOWN keys simultaneously.



To access the menu options for KDC350, simply press the menu button.



After accessing the menu, go to System Config>Memory Size. There will be five options on how to divide the KDC memory between databases and barcodes. Please note that the KDC WILL erase all stored data upon the portion size, be sure to reset the KDC to adjust the portion size.

Barcode/Database Chart

0.5/3.5
1.0/3.0
2.0/2.0
3.0/1.0
4.0/0.0